




## QUICK START GUIDE

### SIZE

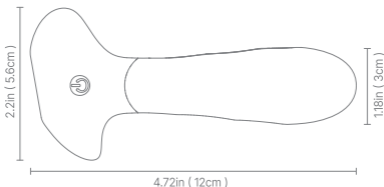

### SPECIFICATION

Power Source:	USB Magnetic charging	Materials:	Silicone+ABS
Run time:	40~60 Minutes	Weights:	0.21 lb
Recharging:	60 Minutes	Size:	4.73x2.2in
Special Features:	9 Vibrating Modes Remote Control	Waterproof:	IPX6

### FUNCTION

#### Using Without Remote

##### ON/OFF



- ON/OFF  
Hold on "🔌" for 3 seconds

##### Change Patterns



- Change Patterns:  
Press "🔌" to switch modes

#### Using With Remote

##### ON/OFF



- ON/OFF  
Hold on "🔌" for 3 seconds

##### Change Patterns



- Press "🔌" to switch modes

The longest working distance: <10m


1. Hold the button(on product) for 3s to be in standby condition.
2. Then you can use the remote to control the Anal plug
3. Hold the button 3s to turn on the remote, press again to change patterns.
4. You can pause the vibration by 3s holding switch in any patterns.
5. Within 20min, you can restart with remote directly.
6. If over 20min out of operation, the product would be totally turn off, repeat all the above process to restart.

## USB CHARGING

**\*WARNING: Please DO NOT use adaptor with ">5V" output**

**\*Please make sure your toy is fully charged while the first time**

Vibrator:

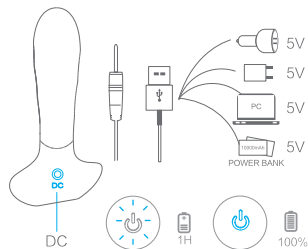

Remote:



★ Please insert the cable into the charge hole.

## PRODUCT CLEANING

- Clean: Please clean product with warm water or antibacterial soap.
- Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry and clean place.
- Attention: Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

## SAFETY

- Do not use it at temperature over 167 °F/75 °C.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.



MADE IN CHINA