 




## QUICK START GUIDE

### SIZE

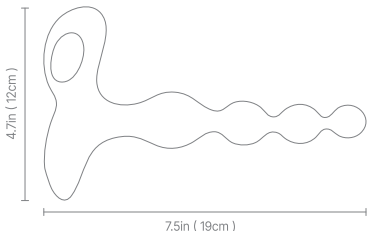

### SPECIFICATION



Materials: Silicone+ABS  
Power Source: Rechargeable  
Weights: 0.4 lb  
Special Features: 10 Vibrating Modes  
Remote Control

Product Size: 7.5x4.7in  
Run time: 70 Minutes  
Recharging: 90 Minutes  
Waterproof: IPX6

### FUNCTION



#### Product

Long press "  " for 2s to turn on/off the toy.  
Short press "  " to change the 10 vibrating modes.

 
 


#### Remote Control

Short press "  " for wireless massage.  
Long press "  " for 2s to stop vibrating.

## USB CHARGING

**\*WARNING: Please DO NOT use adaptor with ">5V" output**

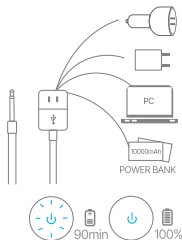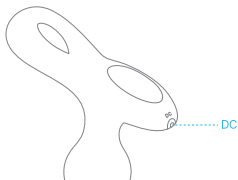

- Please DO NOT use adaptor with ">5V" output
- Please make sure your toy is fully charged while the first time
- When the product is charging, the LED indicator will flash.
- When the LED light becomes solid, charging is complete.
- The toy must be turned off during charging and cannot be used while charging.

## PRODUCT CLEANING

- After use, the toy should be cleaned immediately.
- Use warm water and soap to clean the toy, along with a special toy cleaner, disinfectant, or 75% alcohol occasionally.
- Long-term use of alcohol is not recommended.
- Rinse thoroughly with clean running water.

## SAFETY

- Charge the toy in a safe and dry place.
- Massage oil or hand cream should not be used as lubricants.
- Stop using the toy if you feel uncomfortable, or if you notice it is no longer smooth or has sharp edges.
- It is not recommended to use the toy in water deeper than one meter.
- Do not expose the toy to direct sunlight for prolonged periods.
- Keep the product out of reach of children.
- The product contains a lithium battery. Please dispose of it in a non-recyclable bin.



MADE IN CHINA