



QUICK START GUIDE



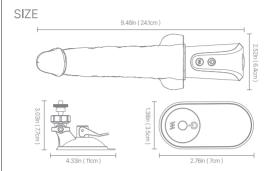

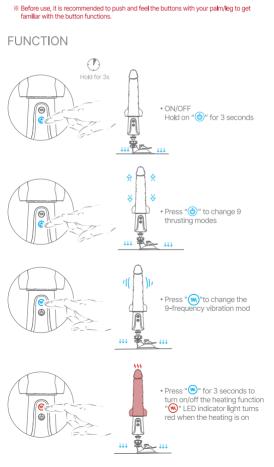






· After turned on, press " W " on the remote to switch 9 modes of vibration

HOW TO INSTALL



USB MAGNETIC CHARGING

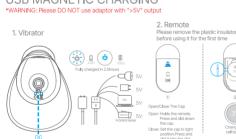

PRODUCT CLEANING

- · Clean: Please clean product with warm water or antibacterial soap.
- · Wipe: Dry the product with paper towels.
- Keep the product in a cool, dry and clean place.
- Attention: Never clean this product with organic cleaner that contains alcohol, gasoline or

SAFETY

- . Do not use it at temperature over 167 °F/75 °C.
- Stop using it when any discomfort occurs.
- . It is recommended to use it with water-based lubricant.
- . Do not use it if you find the product unsmooth or damaged.
- . Keep out of reach of children.















