


Thank you for using this product, please read this booklet carefully before using it!

User manuals

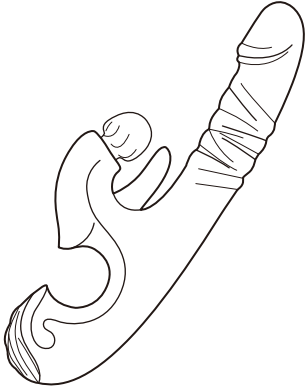

Name: Dani Vibrator
Origin: Dongguan, China

01 / Operating Instructions

① **Tasto di accensione/ vibrazione della lingua**
Premere a lungo il tasto "⏻" per accendere il dispositivo, l'indicatore luminoso si accende ed entra in modalità standby. Premere brevemente il tasto per aprire la modalità di vibrazione della lingua, toccare per cambiare la frequenza, un totale di 8 frequenze, ciclo di frequenza, doppio clic per chiudere la funzione di vibrazione. Premere a lungo il tasto "⏻" per spegnere, ogni funzione si arresta, la spia completa si spegne.

② **Tasto retrattile/ vibrazione testa/riscaldamento**
In modalità standby, premere brevemente il tasto "⏻" per attivare la funzione telescopica e la vibrazione della testa, la spia telescopica, toccare per cambiare la frequenza, un totale di 8 frequenze, ciclo di frequenza, premere a lungo per spegnere la funzione telescopica. Fare doppio clic per attivare la funzione di riscaldamento, la spia lampeggia, quindi fare doppio clic per disattivare la funzione di riscaldamento, la spia non lampeggia. Qualche minuto dopo lo spegnimento della macchina, premere brevemente il tasto "⏻" per ripristinare il telescopio.

③ **Tasto rotante**
In modalità standby, premere brevemente il tasto "⏻" per attivare la funzione rotativa, la spia rotativa è accesa, toccare per cambiare la frequenza, per un totale di 8 frequenze, il ciclo di frequenza, toccare due volte per chiudere la modalità rotativa.

④ **Porta di ricarica**
Collegare la testina di ricarica magnetica con il contatto di ricarica del prodotto per avviare la ricarica.



04 / Care and Maintenance

Clean the product thoroughly before and after each use. Make sure the product is turned off and in the off position before cleaning. Wash the silicone part of the product with water and soap and towel dry. Do not use cleaning agents containing alcohol, petroleum solvents or acetone.

Please store the product in a cool, ventilated and dry place and make sure the product is protected from heat, heavy pressure and moisture. If the product appears to shut down automatically, it may be caused by insufficient power, start the self-protection mode, please charge it in time.

05 / Security matters

As a close companion of the majority of users, to be able to safely and healthily use this massager is the user and our common responsibility.

We would like to remind you that this product is only suitable for adults over 18 years of age, please keep it away from children. Please do not use excessive force during use, please pay attention to avoid injury. Do not mix this product with others. If you feel unwell during use, stop using the product immediately.

Are you happy with this product?

NO 😞

We apologize for any inconvenience caused. If there is any problem with your order: any part is missing, the item is defective, not what you expected or wanted, please give us a chance to improve your experience by contacting our after-sales service staff on the order platform and we will solve it as soon as possible.

Sincerely thank you for using our products, we will work tirelessly to develop more interesting new products to bring you better experience and service.

We apologize for any inconvenience caused to you, we will continue to improve to provide you with better service and experience, also welcome you to continue to experience our other products.

YES 😊

We are honored by your satisfaction and look forward to hearing more from you.

We look forward to hearing more from you, and welcome you to continue to experience our other products, we will provide you with better service and experience.

01

02 / Specification

Product Name: Daydreamer vibrator

Product Size: 35*90*252mm

Function modes: 8-frequency rotation, 8-frequency vibration, 8-frequency retraction, heating

Voice level: ≤60dB

Rated voltage: 3.7V

Battery capacity: 1000mAh

Suitable for people: 18 years old and above

03 / Charging instructions

1. Please charge the product when you use it for the first time, the indicator light blinks when charging, and the indicator light is always on when it is full.

2. Please use the supplied charging cable for charging. The charging time is ≤150 minutes, and the normal operation time after full is >45 minutes.

3. Please use a charger that complies with the parameters for charging, charging with a charger that does not comply with the parameters may affect the battery life or cause damage to the product.

Note: Please do not use it while charging.

03

Regularly check the product for damage and stop using it immediately if damage is found. This product should be treated as waste electrical and electronic products and recycled to the appropriate waste electrical and electronic products recycling station.

06 / Disclaimers

1. Declare that this manual is only for product use tutorials, all interpretation rights belong to the company.

2. Please use this product carefully, any party of any abuse use of this product our company shall not take any responsibility.

04

05