




QUICK START GUIDE

SIZE

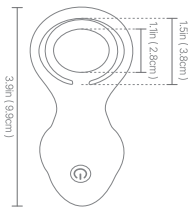

PRODUCT PARAMETERS:

Material: Silicone+ABS

Weights: 0.16lb

Vibration modes: 10

Rate voltage: 3.7V

Charging time: 45 minutes

Charger: 5V/1A ,2A

Using time: 60 minutes

Size: 4.2*2.2in

Accessories: 1*USB charging cable,1*manual

FUNCTION




Long press "  " for 2s to turn on/off the toy.

Short press "  " to change the 10 vibrating modes

USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

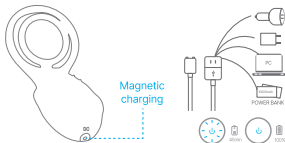

- Please make sure your toy is fully charged while the first time
- When the product is charging, the LED indicator will flash.
- When the LED light becomes solid, charging is complete.
- The toy must be turned off during charging and cannot be used while charging.

PRODUCT CLEANING

- After use, the toy should be cleaned immediately.
- Use warm water and soap to clean the toy, along with a special toy cleaner, disinfectant, or 75% alcohol occasionally.
- Long-term use of alcohol is not recommended.
- Rinse thoroughly with clean running water.

SAFETY

- Stop using the toy if you feel uncomfortable, or if you notice it is no longer smooth or has sharp edges.
- It is not recommended to use the toy in water deeper than one meter.
- Do not expose the toy to direct sunlight for prolonged periods.
- Keep the product out of reach of children.
- The product contains a lithium battery. Please dispose of it in a non-recyclable bin.



MADE IN CHINA