




## QUICK START GUIDE

### SIZE

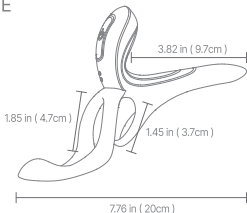

### PRODUCT PARAMETERS:

Material: ABS+Silicone

Weights: 0.21lb

Vibration modes: 9

Rate voltage: 3.7V

Charging time: 90 minutes

Charger: 5V/1A ,2A

Using time: 45 minutes

Size: 197\*119\*47mm

Accessories: 1\*USB charging cable,1\*manual

### FUNCTION



#### Product

Long press "⏻" for 2 seconds to turn on/off.

Short press "⏻" to change 9 vibration modes.



#### Remote Control

Short press "⏻" to switch to the next vibration mode.


Long press "⏻" for 2 seconds to pause.

Short press "⏻" to switch to the previous vibration mode.

Long press "⏻" for 2 seconds to pause.

## USB CHARGING

**\*WARNING: Please DO NOT use adaptor with ">5V" output**

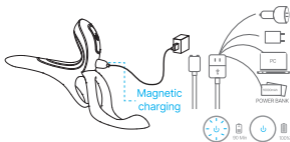

- Ensure the toy is fully charged the first time.
- The indicator light blinks while charging and stays on when fully charged.

## PRODUCT CLEANING

- Clean: Wash the product with warm water and antibacterial soap.
- Wipe: Dry the product with paper towels.
- Store: Keep the product in a cool, dry, and clean place.
- Attention: Do not clean with organic cleaners containing alcohol, gasoline, or acetone. Avoid direct sunlight.

## SAFETY

- Do not use it at temperatures exceeding 167°F (75°C).
- Stop using if any discomfort occurs.
- Water-based lubricant is recommended.
- Do not use if the product is damaged or feels unsmooth.
- Keep out of reach of children.



MADE IN CHINA