+(6)→ Candyhub QUICK START GUIDE

SIZE



PRODUCT PARAMETERS: Charging time: 80 minutes

Using time: 90 minutes Special Features: 9 Vibrating Modes Material: ABS+Silicone

Weights: 0.24lb Waterproof: IPX7

FUNCTION



Product

Long press " U " for 2s to turn on/off. Short press " (b) " to change 10 modes.

 


Remote Control

Short press " (A) " to pause/start.

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output *Please fully charge the device before the first use.



The indicator light blinks while the product is charging and remains solid when fully charged.

PRODUCT CLEANING

- · Clean: Wash the product with warm water and antibacterial soap.
- · Wipe: Dry the product with paper towels. · Store: Keep the product in a cool, dry, and clean place.
- · Attention: Do not clean with organic cleaners containing alcohol, gasoline, or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperatures exceeding 167°F (75°C).
- · Stop using if any discomfort occurs.
- · Water-based lubricant is recommended.
- Do not use if the product is damaged or feels unsmooth.
- · Keep out of reach of children.









