




QUICK START GUIDE

SIZE

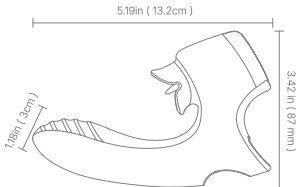

PRODUCT PARAMETERS

Weights: 0.28lb

Waterproof: IPX7

Charging time: 60 minutes

Material: ABS+Silicone


Using time: 40~65 minutes


Special Features: 9 Tongue-like Licking Modes

9 Vibrating Modes

FUNCTION




Long press "  " for 3 seconds to turn on/off the product.

Short press "  " to change the 9 vibration modes and tongue-like licking modes.



USB CHARGING

- *WARNING: Please DO NOT use an adaptor with $>5V$ output.**
- *Please make sure your toy is fully charged the first time.**

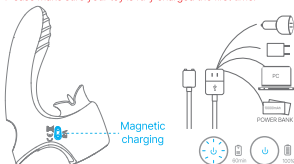

PRODUCT CLEANING

- Clean: Wash the product with warm water and antibacterial soap.
- Wipe: Dry the product with paper towels.
- Store: Keep the product in a cool, dry, and clean place.
- Attention: Do not clean with organic cleaners containing alcohol, gasoline, or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperatures exceeding 167°F (75°C).
- Stop using if any discomfort occurs.
- Water-based lubricant is recommended.
- Do not use if the product is damaged or feels unsmooth.
- Keep out of reach of children.



MADE IN CHINA