 




QUICK START GUIDE

SIZE

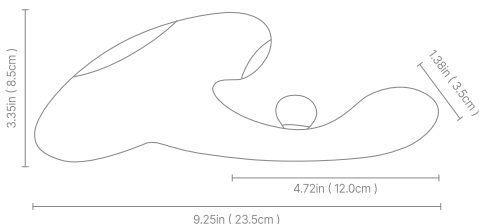

SPECIFICATION

Power Source: USB Magnetic charging

Run time: ≥ 50 Minutes

Recharging: ≤ 150 Minutes

Special Features: Vibration + Telescoping +
Swinging + Suction + Heating

 
Materials: Silicone+ABS

Weights: 0.76 lb

Size: 9.25 x 3.35 x 1.7 in

Waterproof: IPX5

FUNCTION

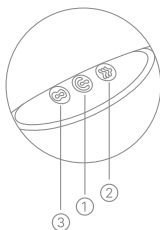

① Power On/Off, Vibration & Heating Functions

Long press ① for 2s to power on (indicator lights up + 1 vibration), enters standby mode.

Click ① to cycle through 9 vibration modes.

Double-click ① to turn heating on/off (red light on/off).

Long press ① for 1.5s to power off.

② Telescoping + Swinging Function

In standby mode: Click ② to cycle through 9 telescoping + swinging modes.



Long press ② to deactivate.

③ Suction Function

In standby mode: Click ③ to cycle through 9 suction modes. Long press ③ to deactivate.

USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

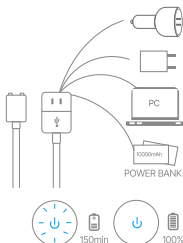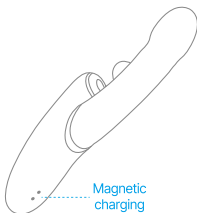  

- When charging, the indicator light will flash. Once fully charged, the light will remain steady.
- Please use the charging cable provided.
- Please use a compatible charger. Using an incompatible charger may shorten battery life or damage the product.
- Note: The product cannot be used while charging.

PRODUCT CLEANING

- Clean: Please wash product with toy cleaner or antibacterial soap and water.
- Dry: Pat or wipe dry with clean cloth or towel.
- Store: Keep toy in a cool, dry place.
- Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use the product at temperatures over 167 °F (75 °C).
- Stop using it immediately if you experience any discomfort.
- Water-based lubricant is recommended.
- Do not use the product if you find it rough or damaged.
Keep out of reach of children.
- The product is waterproof, but it is not advisable to soak it in water for a long time.



MADE IN CHINA