 
+(6)→ Candyhub QUICK START GUIDE

SI7F



PRODUCT PARAMETERS:

Charging time: 120 minutes Using time: 100 minutes Special Features: 10 Vibrating Modes Material: ABS+Silicone Remote Control

Weights: 0.15lb Waterproof: IPX6

FUNCTION



Long press " U = for 2s to turn on/off. Short press " U " to change 10 vibration modes.

USB MAGNETIC CHARGING

- *Before using for the first time, please ensure the product is fully charged.
- *For safety, the product should not be used while charging.
- *To protect battery life, please charge the product as soon as the light turns red.



PRODUCT CLEANING

- Clean: Wash the product with warm water and antibacterial soap.
 Wipe: Dry the product with paper towels.
- ·Store: Keep the product in a cool, dry, and clean place.
 - Attention: Do not clean with organic cleaners containing alcohol, gasoline, or acetone, Avoid direct sunlight.

SAFFTY

- This product is prohibited for use by minors.
- 2. Do not disassemble or discard this product randomly.
- Keep this product out of reach of children.
- Reep tris product out of reach of children.
 A. For your comfort, please use it with lubricant.
- 5. For personal health and safety, this product is for personal use only.
- 6. Stop using the product immediately if you feel unwell during use.
- 7. Stop using the product if any damage is found.
- 8. This product is prohibited for use by pregnant women.
- 9. Do not use the product if you are injured.



