




QUICK START GUIDE

SIZE

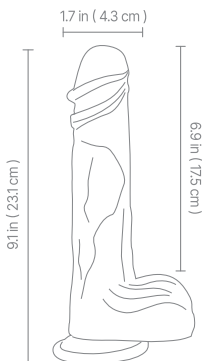

SPECIFICATIONS

Material: Silicone+ABS
Weights: 0.9lb
Functions: 7 Thrusting Modes
10 Vibrating Modes
Swing Function
Heating Function

Charging Time: 120min
Using Time: 50min
Waterproof: IPX5

FUNCTION



Product

Long press "⏻" for 3s to turn on/off.

Remote control

Vibration button

Short press "🌀" to change 10 vibration modes.

Long press "🌀" for 3s to turn off.

Thrusting button

Short press "⏻" to change 7 thrusting modes.

Long press "⏻" for 3s to turn off.


Heating button

Long press "🔥" for 3s to turn on/off.



USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output

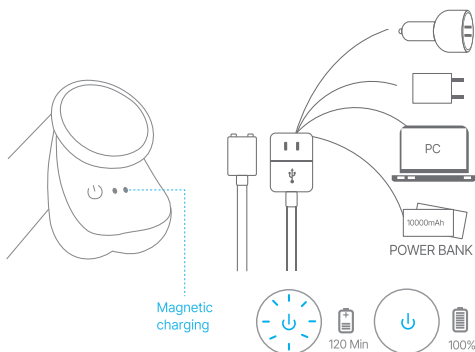

It is recommended to use the charging cable with a 5V/1A charger to avoid damage caused by improper charging.

PRODUCT CLEANING

- Please clean the toy thoroughly before and after use.
- Wash it with water after use. Mix it with shower gel or neutral soap detergent. Keep the toy in a ventilated place to dry after washing, before storing. Do not use detergents containing gas or acetone, as they can corrode silicone products.
- Store the product in a cool, ventilated, and dry place. Ensure the product is protected from direct sunlight, high temperatures, heavy pressure, moisture, and any other pollutants.

SAFETY

- Adult toys are not for use by people under 18.
- For hygiene purposes, we suggest applying a condom to the toy before use.
- We suggest using lube on the thruster to protect your skin.
- Please store it in a dry place, away from direct sunlight and out of the reach of children.
- Cease using it immediately if you experience discomfort.
- Do not use alcohol, gases, or cleaning products other than soap with warm water on the toy.



Certificates



MADE IN CHINA