 
+6→ Candyhub QUICK START GUIDE

SIZE



PRODUCT PARAMETERS:

Charging time: 90 minutes Using time: 60 minutes Noise level: 45dB Weights: 0.34lb Waterproof: IPX7 Material: Liquid silicone

Battery capacity: 600mA Special Features: 9 licking vibration modes

FUNCTION

 


Long press "()" power button/function for 1.5 seconds to switch on/off, LED light on, The tongue motor vibrates for 1 second to enter the standby mode, press again to turn on the snap + vibration mode, a total of 9 frequencies, in order to cycle.

Double-click "①" key to open the heating function, such as the need to close the heating function again double-click "①" key.

USB CHARGING

*WARNING: Please DO NOT use adaptor with *>5V* output *Please fully charge the device before the first use.



The indicator light blinks while the product is charging and remains solid when fully charged.

PRODUCT CLEANING

- Clean: Wash the product with warm water and antibacterial soap.
 Wipe: Dry the product with paper towels.
- Store: Keep the product in a cool, dry, and clean place.
- Attention: Do not clean with organic cleaners containing alcohol,

SAFFTY

- · Do not use it at temperatures exceeding 167°F (75°C).
- Stop using if any discomfort occurs.
- · Water-based lubricant is recommended.

gasoline, or acetone. Avoid direct sunlight.

- Do not use if the product is damaged or feels unsmooth.
- Keep out of reach of children.



