 


# QUICK START GUIDE

## SIZE



# **SPECIFICATION**

Material: Silicone+ABS Weights: 0.11 lb Product Size: 4.1 x 0.1 x 0.1 in Special Features:

9 Vibrating Modes 3 Microcurrent frequencies Power Source: USB charging Run time:

40~70 Minutes Recharging: 60 Minutes Waterproof: IPX7

# ON / OFF

**FUNCTION** 



- Hold on "6" for 3 seconds
- Press " to switch modes



9 PATTERNS

#### MICROCURRENT MODE




- Double click " b" to turn on microcurrent stimulation
- Double click " again to switch the frequency of microcurrent

#### USB MAGNETIC CHARGING

\*WARNING: Please DO NOT use adaptor with ">5V" output

\*Please make sure your toy is fully charged the first time

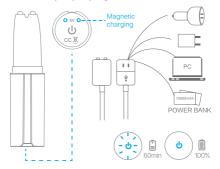

- . Connect the device to USB port to charge .
- . Do not use the device while charging.
- Please connect with power adapter below 5V. . Do not keep the device in water for a long time.
- . If the product fails to charge when powered on, please wait for 10 minutes and then check.

### PRODUCT CLEANING

- · Clean: Please wash product with toy cleaner or antibacterial soap and water. • Dry: Pat or wipe dry with clean cloth or towel.
- Keep toy in a cool, dry place,

  - Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

# SAFETY

- . Do not use it at temperature over 167°F/75 °C.
- Stop using the toy if any discomfort occurs.
- · Use with a water-based lubricant.
- . Do not use if the product is damaged.
- . Keep out of reach of children.













