


QUICK START GUIDE

SIZE

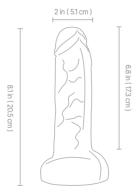

SPECIFICATIONS

Material: Weights: Functions: Silicone+ABS 0.96lb

7 Swinging Modes; 10 Vibrating Modes; Remote Control

Charging Time: 120min Using Time: 60min IPX6 Waterproof:

FUNCTION

Before using the remote control, please long pressthe power button " 😑 " on the product for 3s to turn it on.



Product

Power button

Long press "

" for 3s to turn on/off.

Short press "

" to change vibrating & swinging modes.



Remote control

Swinging button

Short press " C " to change 7 swinging modes. Long press " 💠 " for 3s to turn off swinging modes.



Short press " " to pause/start all functions. Long press " o " for 3s to turn off.


Vibrating button

Short press " w " to change 10 vibrating modes. Long press " M " for 3s to turn off vibrating modes.



USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output

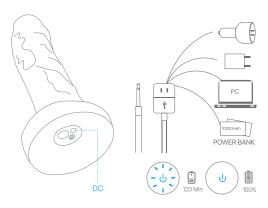

- . Connect the device to USB port to charge.
- . Do not use the device while charging.
- Please connect with power adapter below 5V.
- · Do not submerge under water.
- If the product is not charging while plugged in, please wait 10 minutes and try again.

PRODUCT CLEANING

- . Cleaning: After use, there may be secretions and residual liquid left. If not cleaned in time, it can become a breeding ground for bacteria. The product should not be submerged in water for cleaning. Wash the device with warm water and mild soap (preferably scented soap). Do not use hot water above 50°C. Be careful not to let water enter the switch or charging port while cleaning. Use your fingers to gently clean and avoid using brushes or acidic cleaners.
- . Wiping: After cleaning, wipe the product with a lint-free cloth or towel to dry it.
- . Maintenance: Always turn off the power after use to avoid potential damage to the device or power supply. Store it in a flannelette bag or dust bag and keep it in a cool, dry place.
- . Forbiddance: Do not use cleansers containing alcohol or gasoline. Avoid exposure to water and direct sunlight.

SAFETY

- Do not place the product in a location where heat cannot dissipate properly.
- For personal hygiene, this product should not be shared with others to avoid the risk of infection.
- This product has multiple functions; please do not overuse it, as excessive use can lead to decreased sensitivity.
- . When using this product, please use it with a condom and water-based lubricant for optimal results. . If the product behaves abnormally or if you experience any discomfort while using it, please stop
- immediately.
- Do not use massage oils, skin creams, gasoline, acetone, or any other chemicals as substitutes for
- Clean the product immediately after use to prevent bacterial growth.
- . If you do not intend to use it again, store it in a cool, dry place away from children. Since the product is rechargeable, ensure it is charged again before use to maintain its functionality.













