




QUICK START GUIDE

SIZE

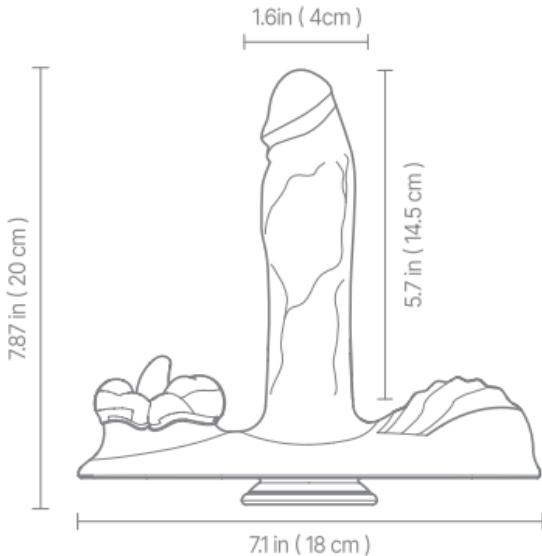

SPECIFICATIONS

Material:	Silicone+ABS	Charging Time:	180min
Weights:	1.4lb	Using Time:	60min
Functions:	3 telescopic vibrations + 9 dual vibrations + heating	Waterproof:	IPX5
		Power Source:	Rechargeable

FUNCTION

Note: The remote control needs the product to be powered on before it works.

Product

Press and hold the power button until the indicator light flashes to turn the device on.

Press once to cycle through 9 dual vibration modes and 3 telescopic thrusting modes.

Press twice to activate the heating function.

Press and hold again to turn the device off.

Remote control

ON/OFF Button: Press and hold to turn the remote on. The screen will light up. Press and hold again to turn it off.

Telescopic Vibration Button: When the device is in standby mode and the remote is on, press to cycle through 3 telescopic vibration modes. Press and hold again to turn off the function.


Dual Vibration Button: When the device is in standby mode and the remote is on, press to cycle through 9 dual vibration modes. Press and hold again to turn off the function.

Heating Button: When the device is in standby mode and the remote is on, press to activate the heating function. Press again to turn it off.



USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output

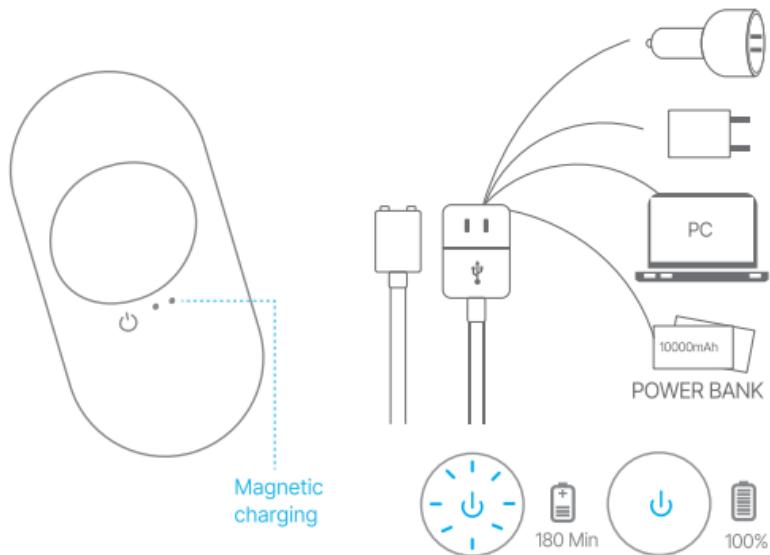

- (1) Please use a dedicated USB charging cable to connect to the charging port of the product.
- (2) Connect the USB end of the charging cable to the computer or the charging adapter to charge.
- (3) During charging, the LED light continues to flash. After full charge, the LED light stops flashing.
- (4) The vibrator cannot be activated while charging.

PRODUCT CLEANING

- Please clean the toy thoroughly before and after use.
- Wash it with water after use. Mix it with shower gel or neutral soap detergent. Keep the toy in a ventilated place to dry after washing, before storing. Do not use detergents containing gas or acetone, as they can corrode silicone products.
- Store the product in a cool, ventilated, and dry place. Ensure the product is protected from direct sunlight, high temperatures, heavy pressure, moisture, and any other pollutants.

SAFETY

- Adult toys are not for use by people under 18.
- For hygiene purposes, we suggest applying a condom to the toy before use.
- We suggest using lube on the thruster to protect your skin.
- Please store it in a dry place, away from direct sunlight and out of the reach of children.
- Cease using it immediately if you experience discomfort.
- Make sure to turn off the power of the dildos and the remote control after use, so as not to affect the use of the battery.
- The product is life waterproof, so it is not recommended to use it directly in water.
- The heating time is about 4-5 minutes, please use it with caution for people who are sensitive to heat.



Certificates



MADE IN CHINA