




QUICK START GUIDE

SIZE

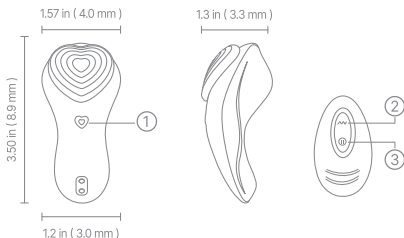

FUNCTION


1. The indicator light flashes quickly while charging, light on once fully charged.
2. Long press "♥" ① for 1.5 seconds to turn on, the main body being standby state.
3. Short press "♥" ① and main body start vibration, tap to switch one mode at a time, 9 modes cycle in turn, the indicator light will change with modes.
4. Long press "♥" ① for 1.5 seconds to turn off.
5. Use the special magnetic charging wire to charge
6. Long press "♥" ① for 1.5 seconds to turn on, the main body being standby state, tap "⋯" ② to open vibration modes cycle, tap "⏻" ③ to stop vibration and being standby state, tap "⏻" ③ to start vibration again.
7. The indicator light flashes quickly when the power is low until it turns off.

SPECIFICATIONS

Material:	Silicone + ABS
Size:	89.2×40mm
Mode:	9 Vibration modes
Charge time:	90-120Mins
Using time:	60Mins
Waterproof:	IPX6

USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

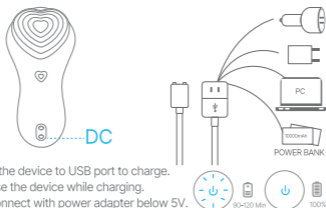

- Connect the device to USB port to charge.
- Do not use the device while charging.
- Please connect with power adapter below 5V.
- Do not submerge under water.
- If the product is not charging while plugged in, please wait 10 minutes and try again.

PRODUCT DESCRIPTION

1. Clitoral stimulator with vibration function to stimulate all of those sensitive nerve endings.

With pulsating vibrations, this clitoral vibe heralds a new age of female orgasms.

SAFETY

1. Don't share it with others for your health.
2. Stop using it if you feel uncomfortable.
3. Stop using it if you find the head of the product is not smooth enough or broken.
4. Keep it from children's reach.

CLEANING AND STORAGE

1. Please clean it thoroughly before and after using.
2. Warm water and medicinal alcohol can be used to clean this product, but warm water is highly recommended.
3. Naturally air dry and avoid direct sunlight.
4. Store it in a dust-free place.

ATTENTION

1. Please charge it before using.
2. Please use good quality personal lubricant. Something (Massageoil, hand cream or cleaning solution etc.) containing hazardous substances cannot be used as lubricant.
3. Once the battery has been fully charged, unplug the toy's Dc plug.



MADE IN CHINA