




## QUICK START GUIDE

### SIZE

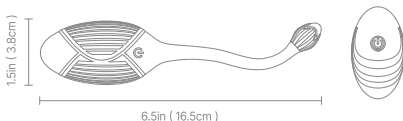




### SPECIFICATION

Materials: Silicone+ABS  
Power Source: Rechargeable  
Weights: 0.22 lb  
Special Features: 10 Vibrating Modes

Product Size: 6.5 x 1.5in  
Run time: 60 Minutes  
Recharging: 90 Minutes  
Waterproof: IP65

 
### FUNCTION



1. When product is received, please charge at once (Refer to charging guide).
2. Press button  1.5 seconds to open / off the product, press again change vibration mode.
3. Press button  Controller for wireless Massage.
4. Press  1.5 seconds to stop vibrating.

## USB MAGNETIC CHARGING

**\*WARNING: Please DO NOT use adaptor with ">5V" output**



- Put the DC charging plug into the hole of product to charge. Then insert the USB charging plug into the USB port of your computer or other charger (output:5V=1A or 5V=1.5A).
- When product is charging, the LED will be flashing.
- When a solid light appears, charging is complete.
- When being charged, the toy must be in shutdown state and cannot be used.

## PRODUCT CLEANING

- Apply a cleaning solution to the product surface.
- Wipe the product clean by hand.
- Rinse the product repeatedly under running water after cleaning.
- Dry the product by air or with a clean towel.
- After ensuring the product is properly sanitized, store it back in the packaging box.
- After use, ensure the product is clean. Do not use corrosive cleaners.

## SAFETY

- This product is not for use by individuals under 18 years of age.
- Do not use at temperatures over 167°F/75°C.
- Stop using if discomfort occurs.
- It is recommended to use a water-based lubricant.
- Do not use it if the product is rough or damaged.
- Keep out of reach of children.



Certificates



MADE IN CHINA