




QUICK START GUIDE

SIZE

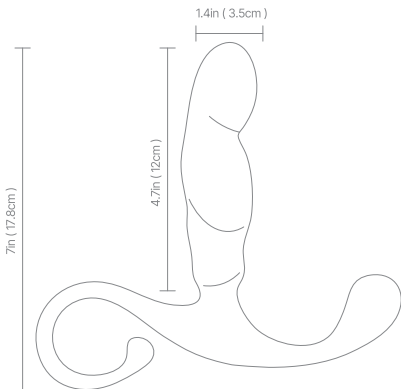

SPECIFICATION

Material:	Silicone+ABS	Power Source:	Rechargeable
Weights:	0.3 lb	Run time:	60 Minutes
Special Features:	10 Vibrating & Tapping Modes	Recharging:	120 Minutes
	Remote Control	Waterproof:	IPX7

FUNCTION

The remote control needs the product to be powered on before it works.



Product

Power button

Long press "⏻" for 3s to turn on/off the device.

Short press "⏻" to change 10 vibrating and tapping modes.



Remote control


Short press "ⓘ" to change 10 vibrating and tapping modes.

Long press "ⓘ" for 3s to pause the device.

Short press "ⓘ" to activate the device.

USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

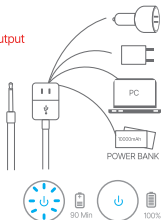

- Please charge the product for the first time before use.
- Connect the USB cable to a USB power adaptor (not included in the accessories) or USB port. You can use any USB power adaptor for charging.
- It takes about 2 hours for a full charge. The charging time may vary depending on the remaining battery level inside the device.
- The appliance can be used for 60-90 minutes after a full charge. The specific usage time depends on the selected vibration mode. The higher the vibration mode frequency, the faster the battery drains.
- You don't have to wait until the battery is completely drained before charging. To extend battery life and ensure charging efficiency, we recommend charging the device before the vibration significantly decreases.
- If the product automatically shuts down, it may be due to low battery. Please charge it in time as it has entered self-protection mode.

PRODUCT CLEANING

- Before and after each use of the product, please clean it thoroughly. Make sure the product is turned off and in a closed state before cleaning.
- Rinse the main part with clean water and antibacterial soap, then rinse with clean water again. Dry with a towel.
- Do not use detergents containing alcohol, petroleum-based solvents, or acetone.
- Please store the product in a cool, ventilated, and dry place to ensure that it is not exposed to direct sunlight, high temperatures, stress, moisture, or pollution.

SAFETY

As the intimate partner of the majority of users, the safe and healthy use of this massager is both the user's and our shared responsibility. Please note the following safety reminders:

- This product is only suitable for adults over 18 years old. Please keep it away from children.
- Do not use excessive force during use. Be mindful to avoid injury.
- Do not mix this product with others. If you feel discomfort during use, please stop immediately.
- Regularly check the product for any damage. If any damage is found, stop using the product immediately.
- After the product is discarded, it should be treated as waste electrical and electronic equipment and recycled at the appropriate recycling station. This product is not suitable for disposal with regular household waste.



Certificates



MADE IN CHINA