+(5) → Candyhub QUICK START GUIDE

SI7F



SPECIFICATION

Product Name: Cherry Pulse Material: Weights: Product Size:

Silicone+ABS 0.25 lb 4.33 x 4.33 x 3.54 in Special Features: 10 function modes

Power Source: Run time: Recharging: Waterproof:

USB charging 60 Minutes 90 Minutes IPX5


FUNCTION



- 1. Long press the (1) power button on the massager to turn on the power. Power on indicator light on, the massager into the massage mode.
- 2. Massager mode has 10 kinds, short press (1) power button to switch modes, mode cycle.
- 3. long press the () power button off, the light goes off, the massager motor stops working.

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output

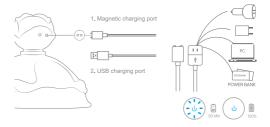

- Magnetic suction induction charging, LED light flashes when charging, full long light, the product uses rechargeable lithium battery, normal operation time is greater than 60 minutes.
- The battery capacity is about 160mAh, about 90 minutes full.
- . Please use the charger with matching parameters for charging, charging with charger with mismatched parameters may affect the battery life or cause the product to be destroyed.
- . Note: Before disposing of the appliance, the battery must be removed from the appliance, and the battery should be disposed of safely.

PRODUCT CLFANING

- Clean: Please wash product with toy cleaner or antibacterial soap and water.
- Drv Pat or wipe dry with clean cloth or towel.
- Store: Keep toy in a cool, dry place.
- Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFFTY

- Do not use it at temperature over 167°F/75 °C.
- . Stop using the toy if any discomfort occurs.
- . Use with a water-based lubricant.
- Do not use if the product is damaged.
- . Keep out of reach of children.









