




QUICK START GUIDE

SIZE

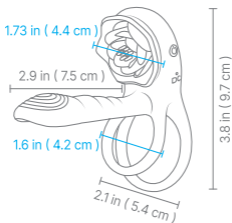

PRODUCT PARAMETERS:

Material: ABS+Silicone

Rated Voltage: <3.7V

Battery Capacity: ≤240mah

Noise figure: ≤50dB

Main Function: 9 Vibrating Patterns


FUNCTION



Long press "⏻" for 1.5 seconds to turn on or off the vibration function.
Short press "⏻" to cycle through the 9 available vibration frequencies.

USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

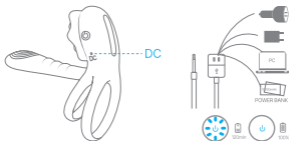

1. In order to prolong the battery life and ensure the charging effect, we recommend that you charge the appliance before the vibration of the appliance is significantly weakened.
2. When the power of the product is used up, the product will directly shut down. At this time, insert the USB plug into the USB socket of the computer or other chargers that output 5v.
3. Put the plug at the other end into the charging port of the product to charge. At this time, the light flashes, and it is fully charged after about 4 hours, and the light is always on.

PRODUCT CLEANING

Before and after each use, wash and dry with neutral soap and water. Keep out of reach of children. Keep away from extreme high or low temperature environments.

SAFETY

1. If you feel uncomfortable during use, please stop massaging.
2. This product is for adult use only, and minors are prohibited from using it.
3. Do not place the product in sunlight or in extremely hot places.
4. If overheating occurs during charging or using the product, please stop charging or using it immediately.
5. Please dispose of discarded batteries according to local regulations. Before discarding the appliance, the battery must be removed.



MADE IN CHINA