




QUICK START GUIDE

SIZE

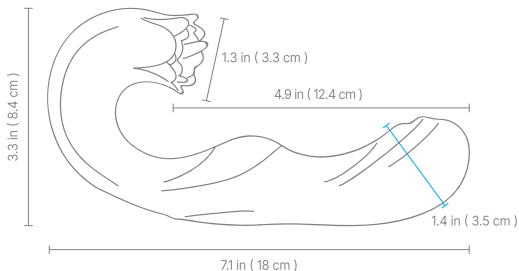






SPECIFICATION

| | | | |
|-------------|--|----------------|----------------|
| Weights: | 0.46 lb | Material: | Silicone+ABS |
| Mode: | 7 Rotating & Vibrating Modes; 7 Tongue-like Licking Modes | Input: | <5V 1A |
| Using time: | 80 mins | Noise: | Less than 60db |
| | | Charging Time: | 150 mins |


FUNCTION



Long press "  " for 2 seconds to turn on/off the product. After powering on, short press "  " to change the rotating and vibrating modes. Short press "  " to change the licking modes. Long press "  " for 2 seconds to pause the licking modes. Within 10 seconds after turning off the product, short press "  " each time to reset the wand's angle for better storage.

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output

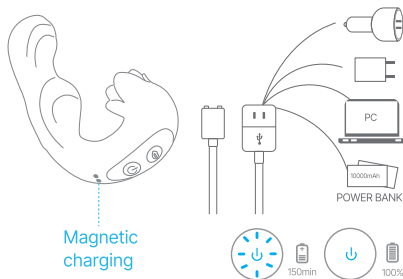

- Connect the device to USB port to charge .
- Do not use the device while charging.
- Please connect with power adapter below 5V.
- Do not submerge under water.
- If the product is not charging while plugged in, please wait 10 minutes and try again.

PRODUCT CLEANING

- Clean: Please wash product with toy cleaner or antibacterial soap and water.
- Dry: Pat or wipe dry with clean cloth or towel.
- Store: Keep toy in a cool, dry place.
- Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperature over 167°F/75 °C.
- Stop using the toy if any discomfort occurs.
- Use with a water-based lubricant.
- Do not use if the product is damaged.
- Keep out of reach of children.



MADE IN CHINA