

QUICK START GUIDE

SIZE



SPECIFICATIONS

Material: Weights: Silicone+ABS 1.1lb

ns: 10 Vibrating Modes 10 Swinging Mode Heating Function Remote Control Charging Time: Using Time: Waterproof: Power Source:

150min 70min IPX5 Rechargeable

FUNCTION

Note: The remote control needs the product to be powered on before it works.



Product

One-click burst:

Short press "9" to experience explosive orgasms.

Power button:

Long press "" for 2 seconds to turn on/off.

Short press "" " to switch between 10 frequencies.



Remote Control

Long press " & " for 2 seconds to turn on/off.

One-click burst:


Short press " 5 " for explosive orgasms.

ower button:

Long press "O" for 2 seconds to enter standby mode. Short press "O" to switch between 10 frequencies. Long press the power button on the dildo to turn it off.

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output

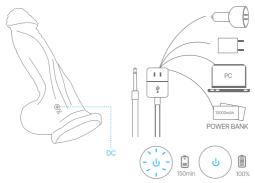

- and free from water or lubricant.
- . Connect the USB charging cable to the DC port and a power source. The charging light will flash to indicate that charging is in progress. Once the battery is fully charged, the light will stop flashing.
- · Do not use the product while it is charging.
- . Charging time should not exceed 24 hours.
- · Only use the original charging accessories provided with the product.

PRODUCT CLEANING

- . Clean your massager before and after each use. Warm water and antibacterial soap are recommended.
- After cleaning, dry the massager with a clean cloth and allow it to air dry in a dry, clean place.
- . Store the massager in a dust-free area, and keep it out of reach of children.

SAFFTY

- For health reasons, do not share the massager with others.
- . If you experience any discomfort, stop using it immediately.
- Water-based lubricant is recommended.













