




## QUICK START GUIDE

### SIZE

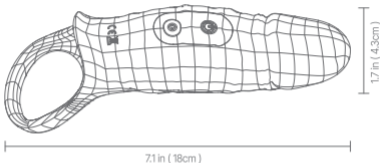

### PRODUCT PARAMETERS:

Material: ABS+Silicone

Product modes: 3 Speeds + 7 Frequencies

Charging time: 45 minutes

Using time: 40 minutes


Weights: 0.2lb

Working noise:  $\leq 50$ dB


Size: 7.1\*1.9\*1.7in

### FUNCTION



Long press "  " to turn on the product. The LED light will illuminate, indicating that the item is in standby mode.


Short press "  " to switch among 10 vibrating modes.

Long press "  " again to turn off the product. The LED light is off.

## USB CHARGING

\*WARNING: Please DO NOT use adaptor with ">5V" output

\*Please make sure your toy is fully charged the first time

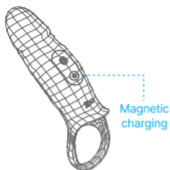

## PRODUCT CLEANING

- Turn off the device before cleaning.
- Clean the toy with warm water and antimicrobial soap.
- Keep the charging port and button area dry and away from water.
- After washing, dry the item with a towel or tissue.
- Store the item in a cool, dry place.
- Avoid sun exposure, heat, high pressure, and wet environments.

## SAFETY

- Please read the manual before using this product.
- Fully charged before first use.
- Please charge it with a matching adapter.
- Don't use the product if the silicone is cracked.
- Please don't use the product while charging.
- Please keep the vibrator out of the reach of children and pets.



MADE IN CHINA