




QUICK START GUIDE

SIZE

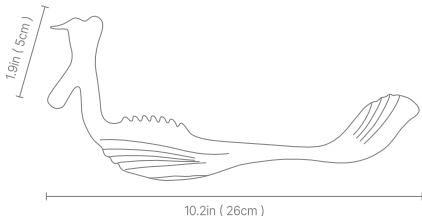

SPECIFICATION

Materials: Silicone+ABS
Power Source: Rechargeable
Weights: 0.21 lb
Special Features: 7 Vibrating Modes
Remote Control

Product Size: 5.9x5.1x2.0in
Run time: 60 Minutes
Recharging: 90 Minutes
Waterproof: IPX6

FUNCTION



Product

1. Long press "⏻" for 1.5 seconds to turn on the product. The indicator light will turn on, and the product will enter the first vibration mode.
Short press "⏻" to change the vibration mode. There are a total of 7 vibration modes that cycle in order.
2. Long press "⏻" for 1.5 seconds to turn on/off the product. The indicator light will turn off and the vibration will stop.




Remote Control

1. Long press "⏻" to turn on/off the product.
2. Short press "〰" to enter the first vibration mode. Press "〰" again to change the vibration mode. There are a total of 7 vibration modes that cycle in order.

USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

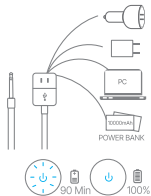

1. Please **fully** charge the product when you use it for the first time, the indicator **light** blinks under the charging state and is **always** on when it is **full**. Battery capacity is 240mAh, about 1.5 hours **full**.
2. Please **clean** and **dry** the appliance **thoroughly** before each charge. The normal running time is 1 hour.
3. Please use a charger with matching parameters to charge, charging with a charger with unmatched parameters may affect the battery life or cause the product to be destroyed.

Note: The product cannot be used while charging.

PRODUCT CLEANING

Wash the product **thoroughly** before and after each use. Make sure that the product is switched off and closed before **cleaning**. Rinse the main part with water and **germicidal soap**, then rinse with clean water and wipe dry with a towel. Do not use cleaning agents containing alcohol, petroleum-based solvents or acetone.

Store the product in a **cool, ventilated and dry place**, keeping it away from heat, pressure and humidity. If the product turns off **automatically**, it may be due to a **low battery level**, which will activate the **self-protection mode**, please **recharge** it in time.

SAFETY

As a **close companion** of the majority of users, the **safe and healthy use** of this massager is the common responsibility of users and us.

Now remind the majority of users: this product is **only suitable for adults** aged 18 years or older, please **keep away from children** placed. Do not use excessive force during the use of the product, please pay attention to avoid injury. Do not mix this product with others. If you feel **uncomfortable** during use, please **stop using** the product immediately. Check the product **regularly** for damage, and stop using it immediately if damage is found. After the product is disposed of, it should be treated as waste **electrical and electronic products** and recycled to the corresponding waste electrical and electronic products recycling station.



Certificates



MADE IN CHINA