 




QUICK START GUIDE

SIZE

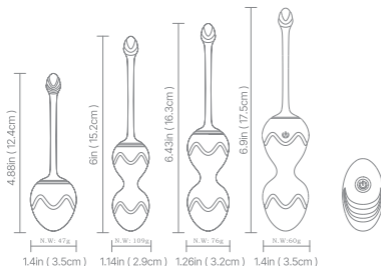

SPECIFICATION

Material:	Silicone+ABS	Power Source:	Rechargeable
Special Features:	10 Vibrating Modes Remote Control	Run time:	80 Minutes
Weights:	Level 1: 0.1 lb Level 2: 0.24 lb Level 3: 0.17 lb Level 4(Vibration): 0.13 lb	Recharging:	90 Minutes
		Waterproof:	IPX6

FUNCTION

The remote control needs the product to be powered on before it works.



Product

- Long press " ⏻ " for 2s to turn on/off the toy.
- Short press " ⏻ " to change 10 vibrating modes.

 
 


Remote control

- Short press " ⏻ " to change 10 vibrating modes.
- Long press " ⏻ " for 2s to stop vibrating.

USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

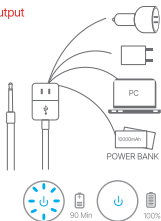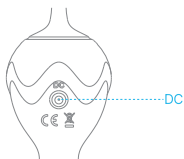

- Please make sure your toy is fully charged while the first time
- Please insert the cable into the charge hole.

PRODUCT CLEANING

- Clean: Please clean product with warm water or antibacterial soap.
- Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry and clean place.
- Attention: Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

SAFETY

- Do not use it at temperature over 167 °F/75 °C.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.



MADE IN CHINA