

SIZE



SPECIFICATION

Materials: Power Source: Weights:

Silicone+ABS Rechargeable 0.71 lb

Special Features: 10 Tonque-licking & vibrating modes

2 Sucking modes

FUNCTION



Turn On / 10 Licking Modes

1. Long press "(U)" for 2-3 seconds to turn on the product. entering standby mode.

Run time:

Recharging:

Waterproof:

55 Minutes

120 Minutes

Life waterproof

2. Short press "(b)" to change 10 licking modes and long press

"(1)" to stop the function.

Two Automatic Suction Modes

1. In standby mode, short press ") to start the suction function. The product will automatically cycle between inspiratory and exhaust air.

2. Short press "(1)" to switch between 2 suction modes. Long press " () " to stop the function.

Manual Suction Mode / Release Air

- 1. In standby mode, long press " \bigcirc " to activate manual suction mode. Release " \bigcirc " to stop it.
- 2. If the inspiratory force is not strong enough in automatic suction mode, long press
- "©" for the most powerful suction. Release "©" to stop.
- 3. Short press "6" to release the air when in automatic suction mode state.

After using, long press " () again to turn off the product.

USB CHARGING



PRODUCT CLEANING

- Clean: Please wash product with toy cleaner or antibacterial soap and water.
- Dry: Pat or wipe dry with clean cloth or towel.
- Store: Keep toy in a cool, dry place.
 - Attention: Never clean the toy with abrasive cleaners containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperature over 167°F/75 °C.
- . Stop using the toy if any discomfort occurs.
- · Use with a water-based lubricant.
- . Do not use if the product is damaged.
- · Keep out of reach of children.



