




QUICK START GUIDE

SIZE

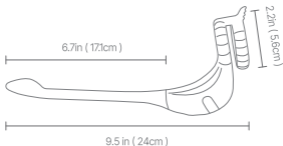


PRODUCT PARAMETERS:

Materials:	Silicone+ABS	Product Size:	9.7x3.6x2.3in
Power Source:	Rechargeable	Run time:	70 Minutes
Weights:	0.19 lb	Recharging:	80 Minutes
Special Features:	10 Vibrating Modes Remote Control	Waterproof:	IPX6


FUNCTION




Product

Long press "  " for 1.5 seconds to turn on the product.

The indicator light will turn on, and the product will enter the first vibration mode.


Short press "  " to change 10 vibration modes.

Long press "  " for 1.5 seconds to turn off the product.

The indicator light will turn off and the vibration will stop.




Remote control

1. Long press "  " for 1.5 seconds to turn on/off the product.

2. Short press "  " to change 10 vibration modes.

USB CHARGING

- *WARNING: Please do NOT use an adapter with an output greater than 5V.
- *Make sure to fully charge the toy before the first use.

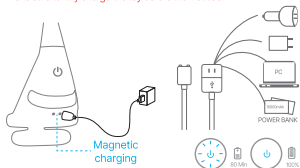

PRODUCT CLEANING

- Clean: Wash the product with warm water and antibacterial soap.
- Wipe: Dry the product with paper towels.
- Store: Keep the product in a cool, dry, and clean place.
- Attention: Do not clean with organic cleaners containing alcohol, gasoline, or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperatures exceeding 167°F (75°C).
- Stop using if any discomfort occurs.
- Water-based lubricant is recommended.
- Do not use if the product is damaged or feels unsmooth.
- Keep out of reach of children.



MADE IN CHINA