




QUICK START GUIDE

SIZE

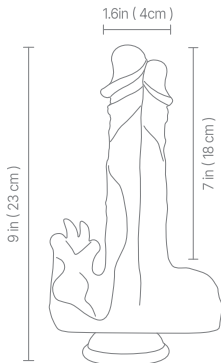


SPECIFICATIONS




Material:	Silicone+ABS	Charging Time:	120min
Weights:	1.41lb	Using Time:	60min
Functions:	Fast 3-frequency retraction 9-frequency vibration Remote Control	Waterproof:	IPX5
		Power Source:	Rechargeable

FUNCTION

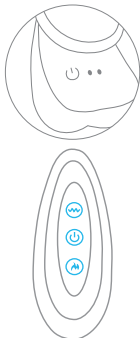Note: The remote control needs the product to be powered on before it works.





Product

1. Long press  for 2 seconds to turn on the machine, the indicator light flashes, enter standby mode, then press the telescopic vibration function to turn on, 3-frequency telescopic 9-frequency vibration, frequency cycle. Double click  to turn on/off the heating function, the indicator light on/off.
2. Long press  for 2 seconds to turn off the machine, the indicator light goes out.

Remote control

Vibrate key: in standby mode, tap  to vibrate 9-frequency cycle, long press 2 seconds to close the function.


On/Off + Telescopic key: standby mode, tap  to open the telescopic 3-frequency cycle, long press 2 seconds to close the function.

Heating key: In standby mode, press  to turn on/off the heating function.

Heating function tips: the product heating function within 3 minutes can reach 43 °C, a short period of time can not be repeated open, such as repeated open will have a high temperature outbreak of the risk of burns! The highest can be up to 60 ~ 70 °C!

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output

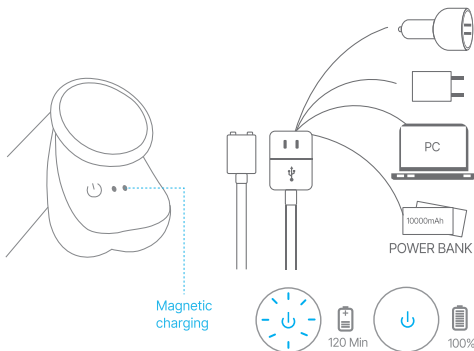

1. Please clean and dry the appliance thoroughly before each charging.
2. The indicator flashes when charging, and lights up when fully charged.
3. Please try to use the supplied charging cable for charging.
4. Please use the charger that matches the parameters for charging, mismatched chargers may affect the battery life or lead to product destruction.

Note: The product cannot be used while charging.

PRODUCT CLEANING

- Please clean the toy thoroughly before and after use.
- Wash it with water after use. Mix it with shower gel or neutral soap detergent. Keep the toy in a ventilated place to dry after washing, before storing. Do not use detergents containing gas or acetone, as they can corrode silicone products.
- Store the product in a cool, ventilated, and dry place. Ensure the product is protected from direct sunlight, high temperatures, heavy pressure, moisture, and any other pollutants.

SAFETY

- Adult toys are not for use by people under 18.
- For hygiene purposes, we suggest applying a condom to the toy before use.
- We suggest using lube on the thruster to protect your skin.
- Please store it in a dry place, away from direct sunlight and out of the reach of children.
- Cease using it immediately if you experience discomfort.
- Make sure to turn off the power of the dildo and the remote control after use, so as not to affect the use of the battery.
- The product is life waterproof, so it is not recommended to use it directly in water.
- The heating time is about 4-5 minutes, please use it with caution for people who are sensitive to heat.

DISCLAIMERS

- Declare that this manual is only for product use tutorials, all interpretation rights belong to the company.
- Please use this product carefully, any party of any abuse use of this product our company shall not take any responsibility.



Certificates

UK
CA

ROHS

CE

MADE IN CHINA

MADE IN CHINA