
# **+(⑤)→** Candyhub

## QUICK START GUIDE

## SI7F

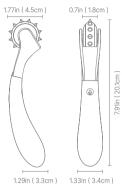

## SPECIFICATION

 
Power Source: USB Magnetic charging Run time: 40~55 Minutes Recharging: 120 Minutes Special Features: 9 Vibrating Modes

360° Roller Rotating

Materials: Weights: Size:

Silicone+ABS 0.25 lb 7.9x2.8x1.4in Waterproof: IPX7

## FUNCTION




 ON/OFF: Press "(A)" for 3 seconds

· After turned on, Press "(6)" to switch 9 vibration modes

## USB MAGNETIC CHARGING

 \*WARNING: Please DO NOT use adaptor with ">5V" output



- . Connect the device to USB port to charge.
- . Do not use the device while charging.
- . Please connect with power adapter below 5V.
- . Do not keep the device in water for a long time.
- . If the product fails to charge when powered on, please wait for 10 minutes and then check.

### PRODUCT CLEANING

- · Clean: Please clean product with warm water or antibacterial soap.
- · Wipe: Dry the product with paper towels.
- Save: Keep the product in a cool, dry and clean place.
- · Attention: Never clean this product with organic cleaner that contains alcohol,
  - gasoline or acetone. Avoid direct sunshine.

#### SAFFTY

- Do not use it at temperature over 167 °F/75 °C.
- . Stop using it when any discomfort occurs.
- . It is recommended to use it with water-based lubricant.
- . Do not use it if you find the product unsmooth or damaged.
- . Keep out of reach of children.















